



RESEARCH&DEVELOPMENT OF AMERICA, INC.

5420 DANIELS STREET STE A, CHINO CALIF. 91710 · (800)634-9166 · (909)628-4722 · FACSIMILE (909)591-2198

www.yoshimura-rd.com

**BMW
S1000R
S1000RR**

051HA152010



NO.	DESCRIPTION	QTY	PART #
1	Oil Filler Plug	1	051HA152010F

Instructions:

1. Remove stock oil filler plug.
2. Remove stock rubber o-ring from oil filler plug and install on Yoshimura oil filler plug.
3. Install Yoshimura oil filler plug.
Torque to 7.4 lb-ft (10 Nm).

If safety wire is required, loop safety wire through the holed drilled in the plug to secure location.



RESEARCH&DEVELOPMENT OF AMERICA, INC.

5420 DANIELS STREET STE A, CHINO CALIF. 91710 · (800)634-9166 · (909)628-4722 · FACSIMILE (909)591-2198

www.yoshimura-rd.com

**BMW
S1000R
S1000RR**

051HA152010



NO.	DESCRIPTION	QTY	PART #
1	Oil Filler Plug	1	051HA152010F

Instructions:

1. Remove stock oil filler plug.
2. Remove stock rubber o-ring from oil filler plug and install on Yoshimura oil filler plug.
3. Install Yoshimura oil filler plug.
Torque to 7.4 lb-ft (10 Nm).

If safety wire is required, loop safety wire through the holed drilled in the plug to secure location.



RESEARCH&DEVELOPMENT OF AMERICA, INC.

5420 DANIELS STREET STE A, CHINO CALIF. 91710 · (800)634-9166 · (909)628-4722 · FACSIMILE (909)591-2198

www.yoshimura-rd.com

**BMW
S1000R
S1000RR**

051HA152010



NO.	DESCRIPTION	QTY	PART #
1	Oil Filler Plug	1	051HA152010F

Instructions:

1. Remove stock oil filler plug.
2. Remove stock rubber o-ring from oil filler plug and install on Yoshimura oil filler plug.
3. Install Yoshimura oil filler plug.
Torque to 7.4 lb-ft (10 Nm).

If safety wire is required, loop safety wire through the holed drilled in the plug to secure location.



RESEARCH&DEVELOPMENT OF AMERICA, INC.

5420 DANIELS STREET STE A, CHINO CALIF. 91710 · (800)634-9166 · (909)628-4722 · FACSIMILE (909)591-2198

www.yoshimura-rd.com

**BMW
S1000R
S1000RR**

051HA152010



NO.	DESCRIPTION	QTY	PART #
1	Oil Filler Plug	1	051HA152010F

Instructions:

1. Remove stock oil filler plug.
2. Remove stock rubber o-ring from oil filler plug and install on Yoshimura oil filler plug.
3. Install Yoshimura oil filler plug.
Torque to 7.4 lb-ft (10 Nm).

If safety wire is required, loop safety wire through the holed drilled in the plug to secure location.