



# YOSHIMURA


RESEARCH&DEVELOPMENT OF AMERICA, INC.

5420 DANIELS STREET STE A, CHINO CA., 91710 · (800) 634-9166 · (909) 628-4722 · FAX (909) 591-2198

[www.yoshimura-rd.com](http://www.yoshimura-rd.com)

## **TURN SIGNAL ADAPTER PLATES**

### **Yamaha Tenere 700 073BG137100**

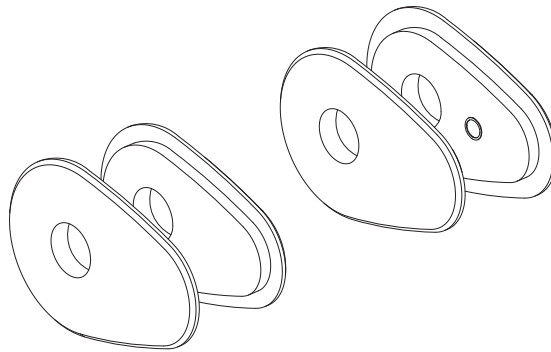

No.	Item	Description	Qty.
1	-	Front Turn Signal Plate	4
<b>Optional Recommended Accessories</b>			
	072BGLTSFK	Yoshimura LED Front Turn Signal Kit	
	072BGLTSFK-S	Yoshimura Sequential LED Front Turn Signal Kit	
	072BGLTSR	Yoshimura LED Turn Signal Kit w/ Relay	
	072BGLTSR-S	Yoshimura Sequential LED Turn Signal Kit w/ Relay	
	073BG-YAM-3	Yoshimura Plug-and-Play Turn Signal Wire Adapter	

**IMPORTANT:** Installation of this product requires the use of aftermarket M8 mounted turn signals.  
Not compatible with stock turn signals.

## Removal

1. Follow steps in factory service / owners manual to remove left and right front cowling.
2. While supporting the front cowling, locate and disconnect front turn signal connectors and carefully remove left and right cowls.
3. Remove left and right turn signals from front cowling.

## Installation

1. Insert turn signal plates onto frontside and backside of front cowling where the stock turn signal was removed and install aftermarket turn signal. Secure using turn signal, washer, and nut.

Note: The outside turn signal plates are etched with "O". The plates with no indicators are installed from the backside of the front cowl and the plates with "O" are to be installed from the outside of the cowl.

2. Repeat steps for opposite side.
3. Re-install left and right front cowling and re-connect turn signal connectors.

Note: 073BG-YAM-3 turn signal adapter wires are available for purchase separately for direct plug-and-play alternative with Yoshimura LED turn signals.

4. Check for proper function of turn signals and that all components are secure prior to riding. Adjust turn signal rotation as needed and tighten turn signal nut.