

Description: **Swingarm Spools-Delrin** Part Number: black: **99950-70544-BLK**


white: **99950-70544-WHT**

Weight: **.5 lbs.**

Installation Time: **.2 hrs.**

Contents:

Drawing reference#	Description	Qty
1	Delrin Spool	2
2	8mm X 40mm Allen Head Bolt	2

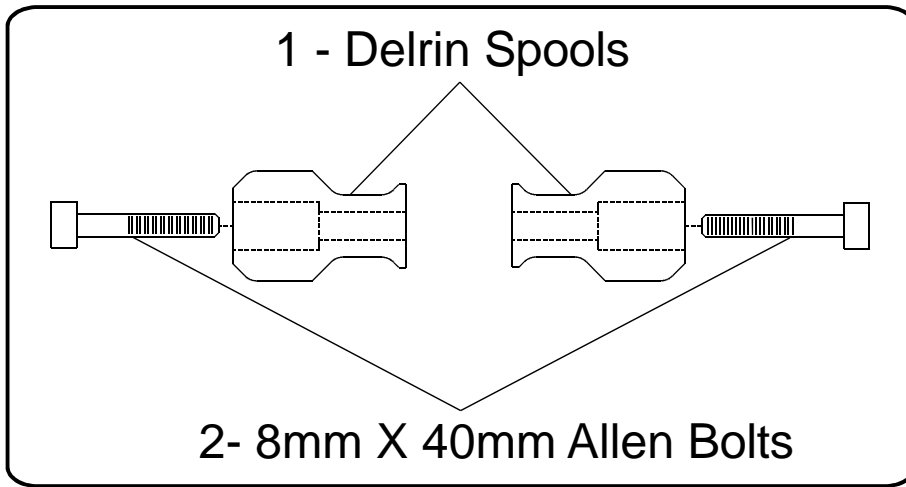

Tools Required:

Tool Description
1 9mm Allen Socket
2 Ratchet wrench
3 Torque wrench



Important:

WARNING

Please read this manual and follow the instructions carefully. To emphasize special information, the symbol **▲** and the words **WARNING**, **CAUTION**, and **NOTE** have special meanings. Pay special attention to the messages highlighted by these signal words.

CAUTION

NOTE:

NOTE: Indicates special information to make maintenance easier or instructions clearer.

WARNING

Indicates potential hazard that could result in death or injury.

CAUTION

Indicates potential hazard that could result in vehicle damage.



**Preparation
Prior to
Installation**

Read instructions carefully. Lay out all parts and tools in a clean area. Visually inspect parts for possible damage from shipping.

⚠ WARNING

Engine and exhaust system can be extremely hot. Let motorcycle cool down before beginning installation.

Installation

1. Install left and right side Delrin spools onto swingarm using supplied 40mm allen bolts. (See Fig's.1 & 2 for location)
2. Torque bolts to 13 n.m. (9.5 lb-ft).



Fig. 1



Fig. 2

**Inspection/
Adjustment**

Periodic inspection of mounting bolts is advised once every 50 hours of riding.

In the event of riding mishap where the Delrin spools come in contact with the ground, it is recommended that the Delrin spools be removed and inspected for damage and fit. If in doubt, replace units. Clean with mild soap and water.

**Inspection/
Adjustment**

TROUBLE	INSPECTION	DIAGNOSIS	ACTION
Spools not level	Visually inspect spools and bolts for damage.	Bolt and/or spool damage.	Replace spool set.