


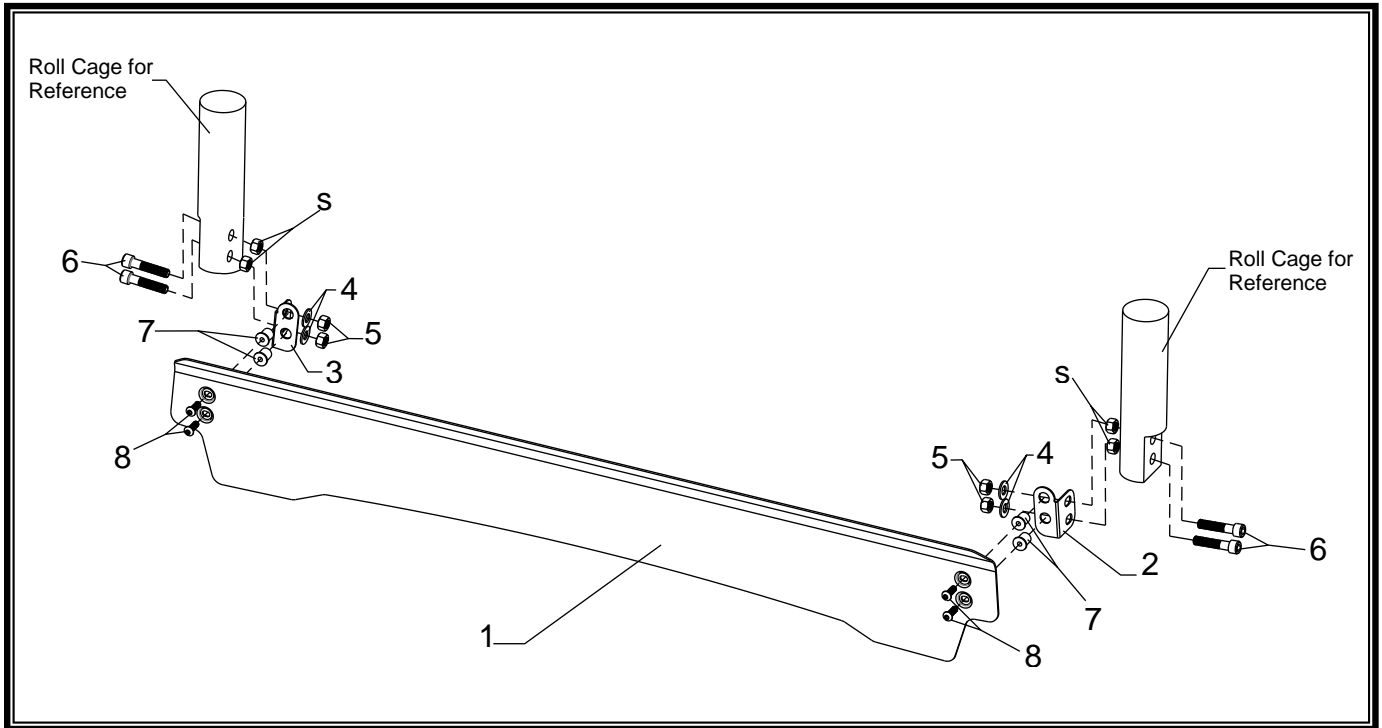


# Performance Aluminum Windshield

**APPLICATION**

YEAR	MODEL
2011-2013	Polaris RZR XP900
2013	Polaris RZR XP900 Jagged X
PRODUCT	
906XX399000	Polaris RZR XP900 Aluminum Windshield Kit

 This product is designed for use in closed course racing and is not intended for highway use. Read through all instructions before beginning installation.



**S = Stock**

No.	Part #	Description	Qty
1	39900-WS	Yoshimura Windshield	1
2	39900-WSBKT-L	Left Windshield Bracket	1
3	39900-WSBKT-R	Right Windshield Bracket	1
4	318-13116WSHR	Washer	4
5	318-16NUT	Nut	4
6	318-16X1-314	Socket Head Cap Screw	4
7	114-20RRNUT	Rubber Rivet Nut	4
8	114-20X0-314BHS	Button Head Cap Screw	4
**	NRB-24	Neoprene Rubber Strip	1
**	17020C	Yoshimura Sticker	2

***-TOOLS REQUIRED-***

*Metric Socket Set • Combination Wrench Set • Metric Allen Wrench Set*

***-INSTALLATION-***

- 1. Remove and replace the front roll cage bolts using the bolts supplied in the kit.  
Note: Roll cage may be under tension. Replace one bolt at a time using the stock locknut. Torque to factory specifications.**
- 2. Install windshield bracket on the inside of the roll cage using the supplied washers and nuts.  
Orientation is as follows: Bolt, roll cage, lock nut, windshield bracket, washer and nut. See diagram for orientation. Do not tighten nuts at this time.**
- 3. Install supplied rubber rivet nuts onto windshield bracket.**
- 4. Install neoprene rubber strip onto the bottom of the windshield. The use of adhesive may be desired when applying the rubber neoprene strip onto the windscreen to prevent the neoprene rubber strip from coming off in harsh environments.**
- 5. Install Yoshimura windshield using supplied button head screws. Tighten screws until snug and the rubber rivet nut mushrooms onto the back side of the bracket.**
- 6. Tighten windshield bracket nuts.**