



YOSHIMURA

RESEARCH&DEVELOPMENT OF AMERICA, INC.

5420 DANIELS STREET STE A, CHINO CALIF. 91710 · (800)634-9166 · (909)628-4722 · FACSIMILE (909)591-2198

www.yoshimura-rd.com

EMS Cube Accessories Shift Light

36000K

EMS Cube 4 stages Shift Light



Note: *Read through all instructions before beginning installation.*

Installation Steps:

- 1 Remove seat and open rear storage compartment.*
- 2 Remove fuel tank mounting bolts near steering head and tilt fuel tank back.*
- 3 Mount the EMS Cube Shift Light in a convenient place by using supplied Velcro fastener.*

- 4 Route EMS Cube Shift Light harness securely and away from moving parts. Run the harness underneath steering head and underneath gas tank, towards the storage compartment.
- 5 Secure harness with supplied zip tie.
- 6 Plug EMS Shift Light Switch harness into EMS Cube. (See Fig. 1)
- 7 Check that all wiring connections are tight.
- 8 Reinstall fuel tank and seat. Check that wiring is not pinched or kinked.
- 9 Set the RPM range for each light by using Yoshimura Engine Management System interface.



Fig. 1

Turn the ignition ON without starting the bike. Make sure that the EMS Cube is connected with the computer. Open Yoshimura interface. Click on “Command” and then “RPM Out...”. Set Low Limit RPM, High Limit RPM, and one of the four options, which determines when the light is ON and OFF. Click on “Apply”. Repeat the steps for light 2, 3, 4. (See Fig. 2)

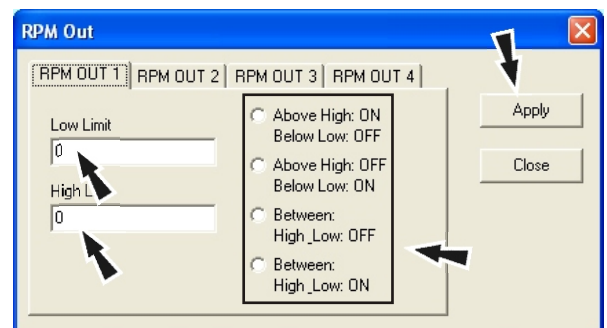


Fig. 2

10 If any problem is found, please carefully follow through the installation steps again. If problem still persists, please

Parts list:

DESCRIPTION	QTY	PART #
EMS Cube Switch Light	1	36000
Zip Tie Black	3	ZT-200
Velcro adhesive	1	5000-V
Instructions	1	INST KIT